


DSE3110

MANUAL & AUTO START CONTROL MODULE

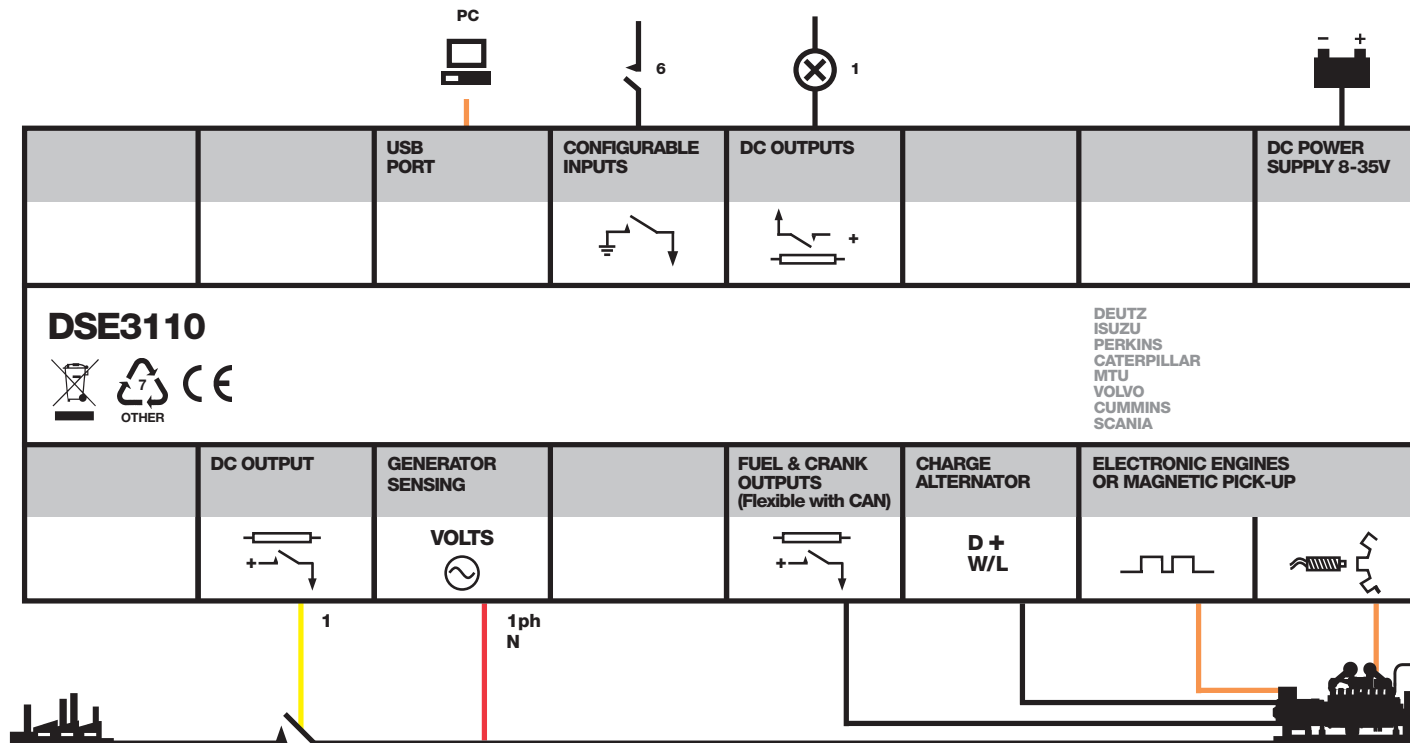

4.3 TYPICAL WIRING DIAGRAM

